
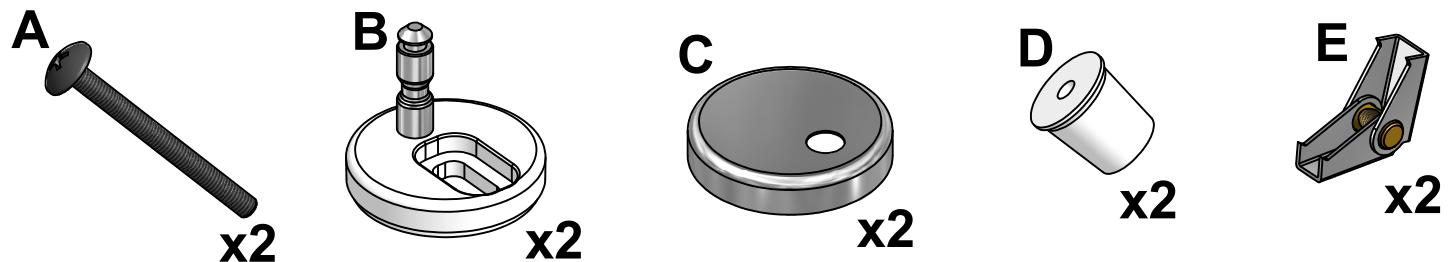




**90739, 90839, 90939  
90143, 90144**

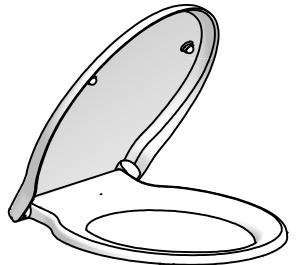


**1** x2

A +

**2** x2

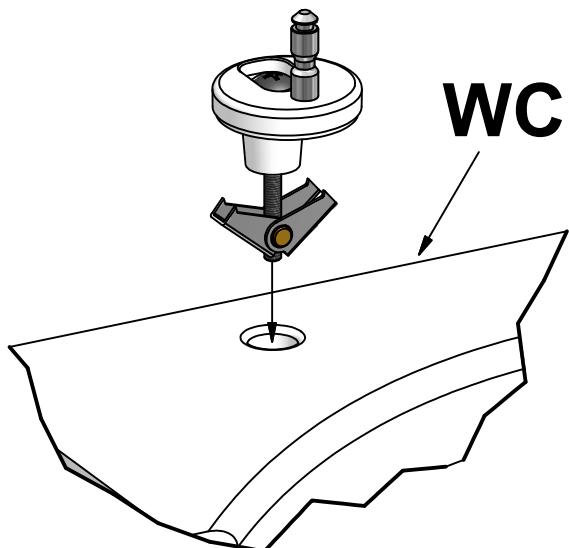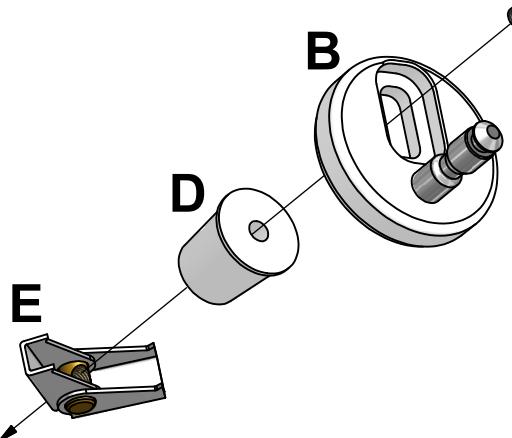


**3** x2

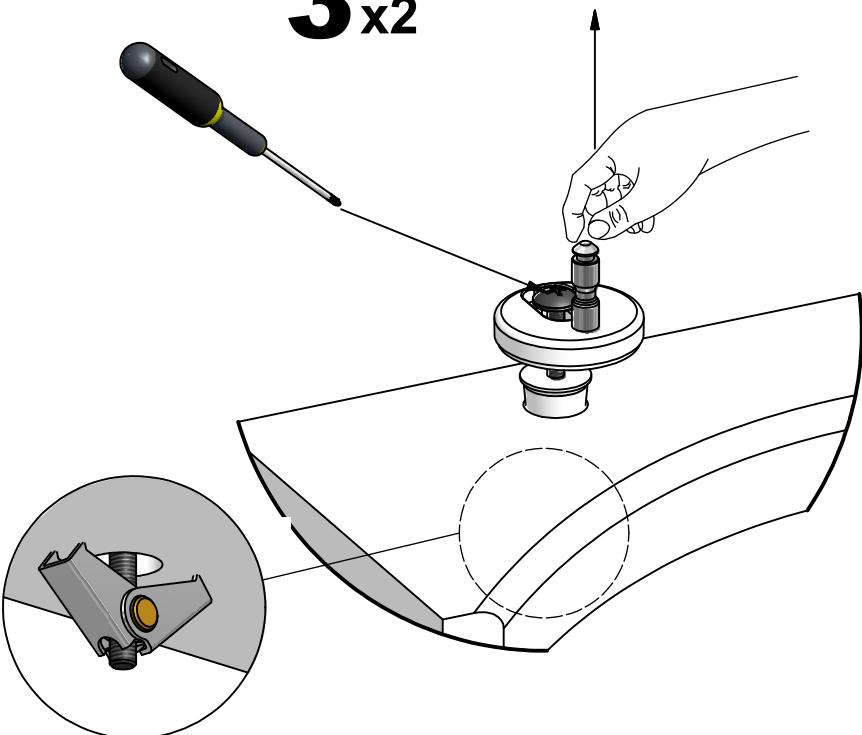


- S** Dra skruvorna så löst att infästningen (B) fortfarande går att justera.
- N** Dra skruene så løst at innfatningen (B) fortsatt er mulig å justere.
- DK** Skru skruerne så løst at det stadig (B) går at justere.
- FI** Kiristä ruuveja vain sen verran, että kiinnitystä vielä pystyy säätämään.
- GB** Loosely tighten the screws to allow adjustments of the fittings (B).
- RU** Затягивайте шурупы в такой степени, чтобы их можно было все-таки регулировать.

**4**


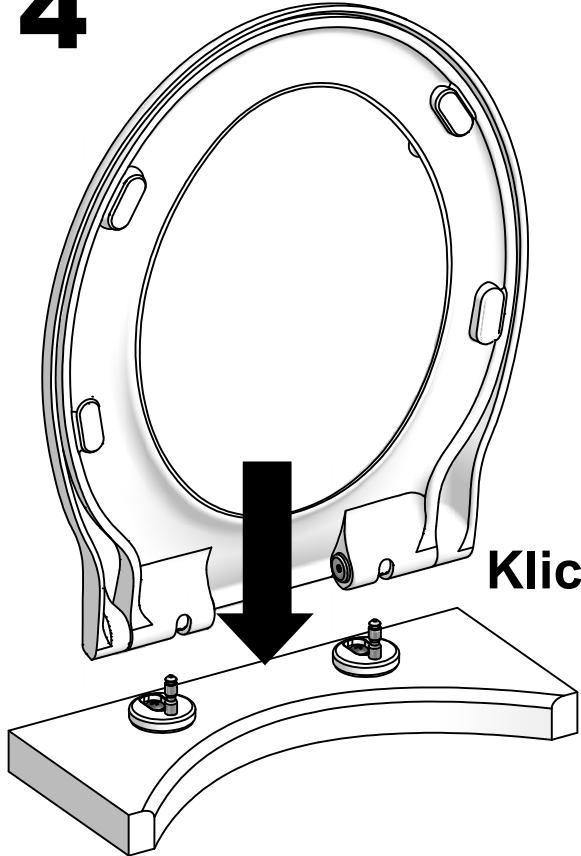


**5**

- S** Justera in sitsen på plats.
- N** Still inn setet på plass.
- DK** Justere sædet ind på plads.
- FI** Säädä kansi paikalleen.
- GB** Adjust the seat into correct position.
- RU** Отрегулируйте правильно крышу на место.


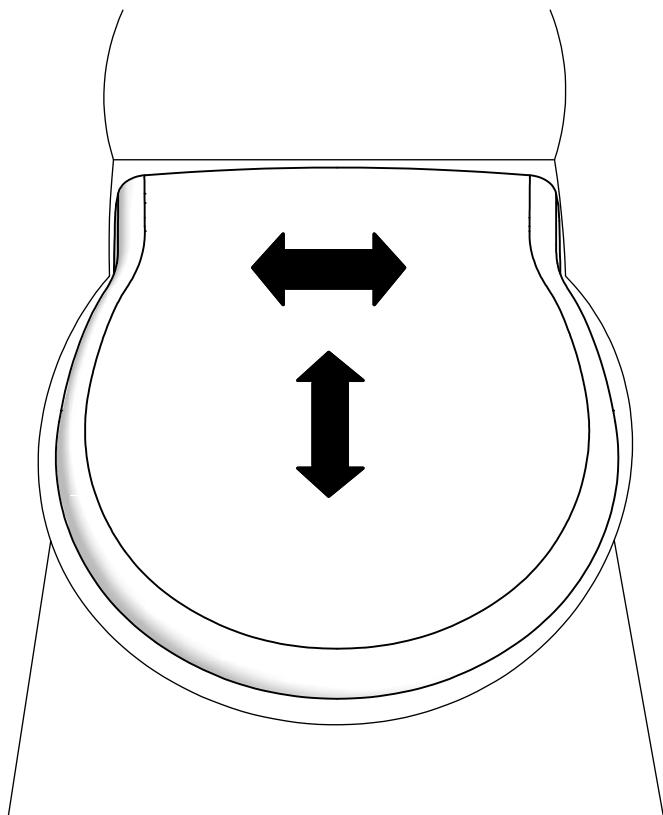


**6**

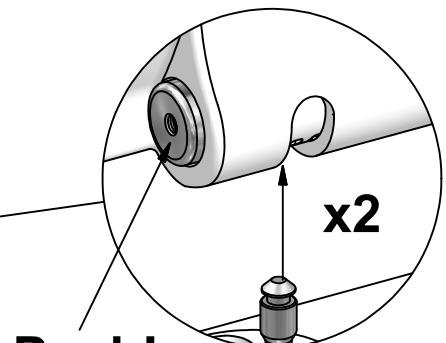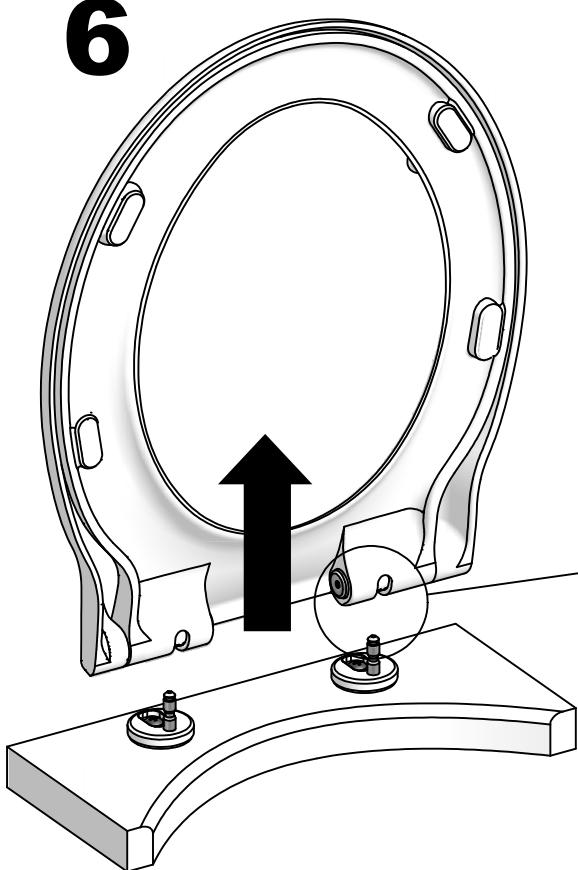


**Push!**

**7 x2**

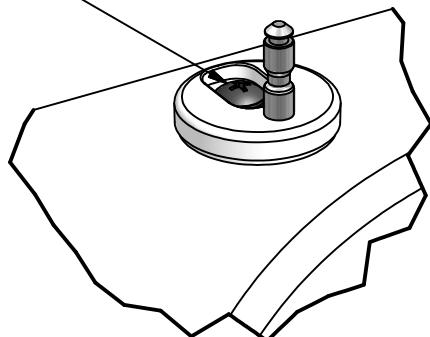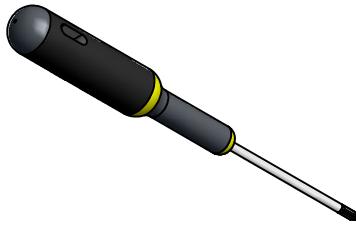


- S** Skruva nu åt skruvorna fullt.
- N** Skru nå fast skruene.
- DK** Skru skruerne ordentligt fast.
- FI** Kiristä sitten ruuvit.
- GB** Firmly tighten the screws.
- RU** Затем закрутите шурупы.

**8 x2**

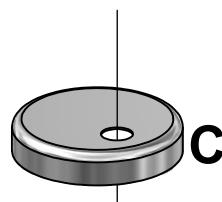

**9**

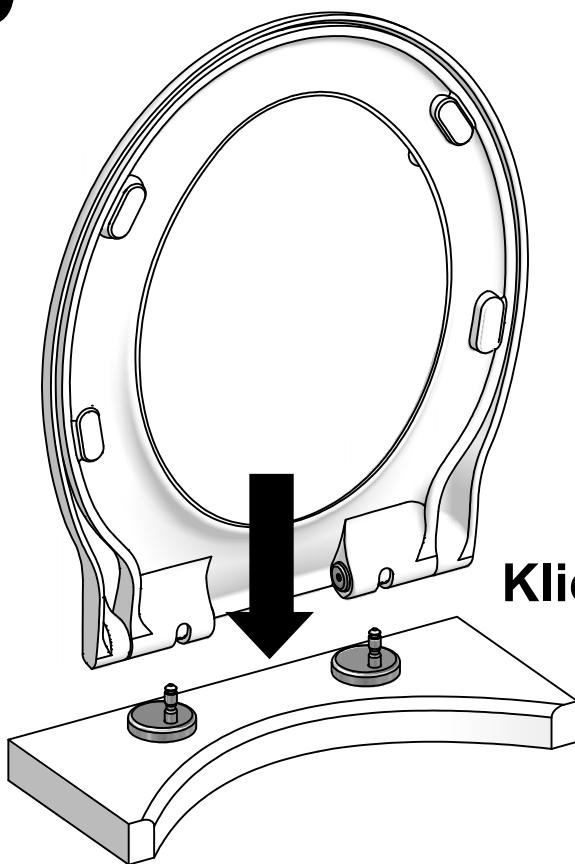

**SVEDBERGS®**

2012-01-20